


180.1910.19

180.1910.19HS

180.1910.19HT

VARIANTE HT
HT MODEL

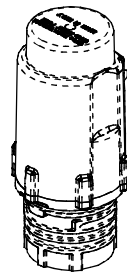


141.602.17

180.602.49

180.602.49

180.620.34
6.0/90° NERO/BLACK

VARIANTI STANDARD/HS
STANDARD/HS MODELS

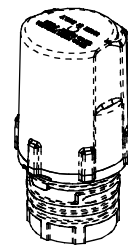


141.602.17

180.602.49

180.602.49

180.620.35
22/90° NERO/BLACK

VARIANTE STANDARD
STANDARD MODEL

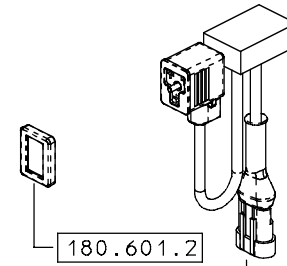


180.601.2

180.232.19

SMART SPRAY


VARIANTI HS/HT
HS/HT MODELS

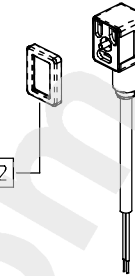

180.601.2

180.232.5

POSIZIONE DI PARTENZA 180.620.34 E 180.620.35
180.620.34 AND 180.620.35 STARTING POSITION
SCALA/SCALE 1:1

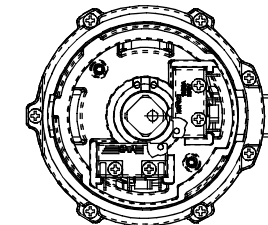

SOLO PER KIT
FOR KIT ONLY

75.1003.23

142.602.18

172.602.16

180.306.1 x 2

180.602.30

180.602.48

180.602.50 x 2

180.602.106

180.1009.1 x 2

180.1603.16 x 2

180.1603.21 x 2

280.507.8

284.602.82

180.4.8

180.614.7

68.602.9

180.602.44

180.602.44

180.1506.26

180.1304.55


180.1617.6

ASSEMBLARE 180.1617.6 CON SELON 628
COPPIA DI SERRAGGIO 15 Nm

ASSEMBLE 180.1617.6 WITH SELON 628
TIGHTENING TORQUE 15 Nm

180.507.13

RIFERIMENTO / NOTCH
180.1304.55

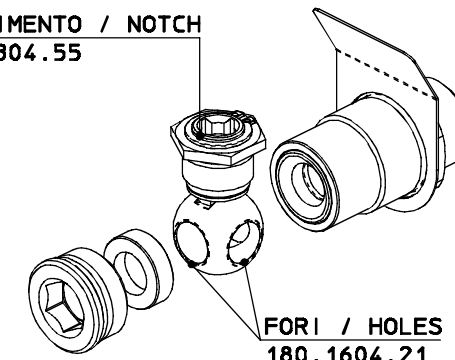

FORI / HOLES
180.1604.21

POSIZIONE DI ASSEMBLAGGIO E PARTENZA 180.1604.21 E
180.1304.55 PER MONTAGGIO 180.620.34 E 180.620.35
SCALA 1:1

180.1604.21 AND 180.1304.55 ASSEMBLING AND STARTING
POSITION FOR 180.620.34 AND 180.620.35 ASSEMBLING
SCALE 1:1

180.602.30

180.1702.32

180.1709.1
MARCATURA LASER

180.1603.18

180.1604.21

180.1603.18

180.1504.76
LOXEAL 56-03

180.107.74

COME SI ORDINA / HOW TO ORDER

Kit ricambio
Spare parts kit **180.302.31**

DESCRIZIONE: VALVOLA 180 DUE VIE 63/41. HS SS	N°revisione 07	Data revisione 09/09/2019
Braglia srl Tel. +39 0522 340648 Fax +39 0522 345025 I-42022 REGGIO EMILIA - ITALY - UE Email tecnico@braglia.it	DISEGNATO ABRAGLIA	APPROVATO GBRAGLIA
	Dis.N°/Codice	180.1910.19