

180.1910.9
180.1910.9 HS
180.1910.9 HT
180.1910.9 NC

VARIANTE HT
HT MODEL

141.602.17
180.602.49
180.602.49

180.620.34
6.0/90° NERO/BLACK

VARIANTI STANDARD/HS/NC
STANDARD/HS/NC MODELS

141.602.17
180.602.49
180.602.49

180.620.35
22/90° NERO/BLACK

VARIANTE STANDARD
STANDARD MODEL


180.601.2
180.232.19

SMART SPRAY

VARIANTI HS/HT
HS/HT MODELS

180.601.2
180.232.5

POSIZIONE DI PARTENZA 180.620.34 E 180.620.35
180.620.34 AND 180.620.35 STARTING POSITION
SCALA/SCALE 1:1

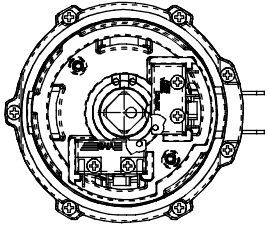

ASSEMBLARE 180.1617.6 CON SELON 628
COPPIA DI SERRAGGIO 15 Nm

ASSEMBLE 180.1617.6 WITH SELON 628
TIGHTENING TORQUE 15 Nm

180.4.8
180.614.7
68.602.9
180.602.44
180.602.44
180.1506.26
180.1304.55
180.1617.6
180.1709.1
MARCATURA LASER
180.1504.42
LOXEAL 56-03
180.1603.21
180.1603.21
180.1604.22
180.218.153
180.1702.32
180.602.30
180.107.76

180.507.13

RIFERIMENTO / NOTCH
180.1304.55

FORO / HOLE
180.1604.22

POSIZIONE DI ASSEMBLAGGIO 180.1604.22
E 180.1304.55 NEL 180.107.76 - SCALA 1:1

180.1604.22 AND 180.1304.55 ASSEMBLING
POSITION INSIDE 180.107.76 - SCALE 1:1

RIFERIMENTO / NOTCH
180.1304.55

FORO / HOLE
180.1604.22

POSIZIONE DI PARTENZA 180.1604.22 E 180.1304.55
PER MONTAGGIO 180.620.34 E 180.620.35 - SCALA 1:1

180.1604.22 AND 180.1304.55 STARTING POSITION
180.620.34 AND 180.620.35 ASSEMBLING - SCALE 1:1

SOLO PER KIT
FOR KIT ONLY

	75.1003.23
	142.602.18
	172.602.16
	180.306.1 x 2
	180.602.30
	180.602.48
	180.602.50 x 2
	180.602.106
	180.1009.1 x 2
	180.1603.16 x 2
	180.1603.18 x 2
	280.507.8
	284.602.82

COME SI ORDINA / HOW TO ORDER
Kit ricambio
Spare parts kit **180.302.31**